

---

Question

[Shilpi Yerramsetti](#) · Oct 18, 2021

## Ensemble TCP - ASTM Message Parsing

Hello Everyone ,

From Serial Device , i am getting only <CR> as line terminator , but ensemble expects <cr><lf> as line terminator . I couldnt change Line Terminator values in parser . Need help please

Thanks

Shilpi

[#Ensemble](#)

Product version: Ensemble 2013.1

---

Source URL: <https://community.intersystems.com/post/ensemble-tcp-astm-message-parsing>